39 Chevy Sedan Delivery Front Interior Light Wiring

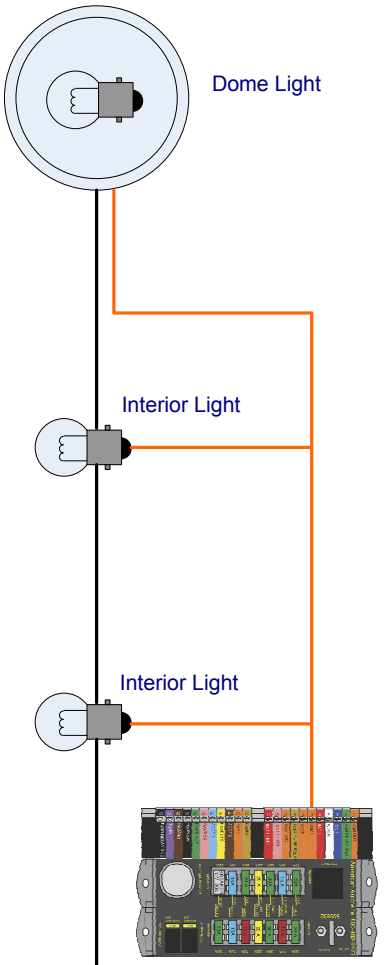

Power is supplied to the interior lights from the #6 Dome Light connection on the Highway 22

Door Switch

Door Switch

Ground

The manual On/Off switch is used to provide the ground to the door switches when the switch is in the “On” position.

When the On/Off switch is “on” and a door is opened, the interior lights will illuminate because the ground is passed through the On/Off switch to the door switches and then to the lights.

When the On/Off switch is “off”, the ground is interrupted and *will not* pass to the door switches. This is done to allow the doors to be open and the lights remain off.

Headlight Switch

Ground

The headlight switch will pass a ground when the knob is turned all of the way counter-clockwise. We decided to have this ground passed directly to the lights so the interior lights could be turned on at any time.